

5. WHY DO BELTS BREAK?

a **The height adjustment lever on the machine was set too low.** The low setting is for hard floors like ceramic or wood, not carpets. As a rule, start on the high setting and work your way down.



b **The belt is in the wrong position.** When replacing the belt check that it is placed between the two indication lines on the chassis.



Belt placed in the right position

c **The Upright vacuum was used on a damp carpet** and picked up mud which clogged the moving parts.



d **The belt does not turn** due to build up of hair and debris in both the pulley nut and the brush roll. Check frequently and clean if necessary.

e **The brushroll does not turn.** Brush rolls get filled with strings, hair and sticky dirt. This stops the brush roll from turning and breaks the belt. The brush roll is easy to take out to clean. Check the two end caps of the brush roll to make sure they turn freely. If they don't, put in a new brush roll.



 **Koblenz**[®]

**Quick and easy
steps to use
your upright**



For more information contact
Thorne Electric Company
P.O. Box 18363, San Antonio Texas 78218
1 (800) 548-5741, Fax: (210) 590-1258

 **Koblenz**[®]

110409

Don't compromise, get the best!

1. TO START



To activate the motor, lower the handle by stepping down on the foot peddle on the left side of the unit. Don't force down the handle, it should go down easily.



Press foot peddle and hold down

2. TO STOP

Just return the handle to the upright position until it clicks. The upright will turn itself off.



Raise handle



3. TO DISCONNECT THE LINE CORD

Go to the outlet where the cord is connected and pull the plug out. Don't pull it out by the cord. It will break!

Wrap the cord on the hooks starting where the line cord is connected to the machine.



To wind, start here



To unplug grasp the plug



4. REMEMBER, DON'T OVERFILL THE BAG

a Check to see how much dirt is in the bag frequently and empty the bag. Dirt doesn't just go away!



b Don't pick up metal objects with the upright such as: clips, screws, pins, etc, unless you have a magnet.

